


Firmware- and Bootmanager- Flash (USB-to-CAN compact, USB-to-CAN II, iPC-I XC16/PCI, iPC-I XC16/PCIe)

1. Please install the VCI32.2.2098 (or newer) if it is not installed already
http://www.ixxat.com/download_vci_v3_en.html
2. Please open the VCI3floadGUI.exe from the VCI3 installation directory
("c:\Programme\IXXAT\VCI 3.2\VCI3floadGUI.exe")
3. Select the CAN interface board in the „Device“-combobox in the „Destination“-field.
4. Click the „>>“ Button and select the firmware (or bootmanager) that has to be flashed.
(Please ask support@ixxat.de for the .H86 file).
5. Click the Button „Flash“ and wait until the firmware is flashed complete.

Attention: Please do not switch off the device before the firmware (or bootmanager) is complete flashed.

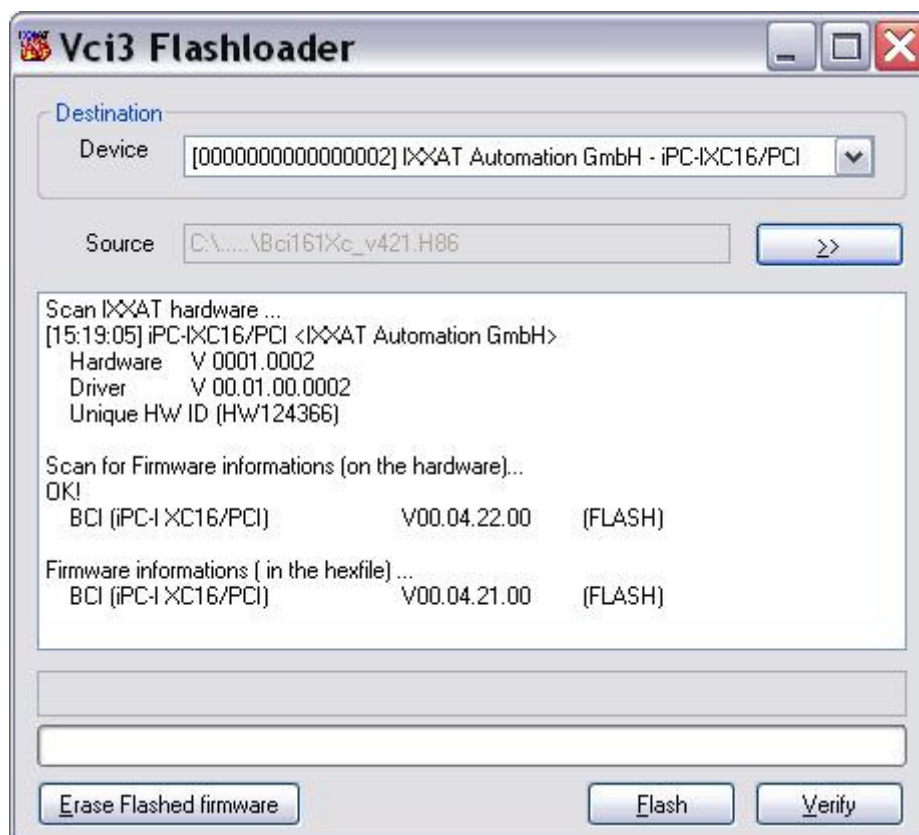

Note: Please use fload32.exe for Firmware (or Bootmanager) update of CAN@netII.