

X-gateway Interface Addendum **PROFIBUS Slave**

Doc.Id. SCM-1200-126
Rev. 1.03

Table of Contents

Preface	About This Document	
	How To Use This Document	P-1
	Important User Information	P-1
	Related Documents.....	P-2
	Document History	P-2
	Conventions & Terminology.....	P-3
	Sales and Support	P-4
Chapter 1	About the PROFIBUS Slave Interface	
	General Description.....	1-1
	Features.....	1-1
	External View	1-2
	<i>Interface Status LEDs</i>	1-2
	<i>Connectors and Switches</i>	1-2
Chapter 2	Data Exchange	
	<i>Input Data (Gateway to PROFIBUS)</i>	2-1
	<i>Output Data (PROFIBUS to Gateway)</i>	2-2
Chapter 3	Installation and Configuration	
	Node Address	3-1
	Network Configuration (Anybus NetTool for PROFIBUS)	3-1
	<i>General Information</i>	3-1
	<i>Step 1: Install the .GSD-file</i>	3-1
	<i>Step 2: Create a New Configuration</i>	3-1
	<i>Step 3: Configure the I/O block layout of the Slave Interface</i>	3-2
	<i>Step 4: Download Configuration the Configuration into the Master</i>	3-2
	<i>Step 4: Go Online</i>	3-2
Appendix A	Technical Specification	
	Network Interface Details	A-1
	PROFIBUS Connector Pinout	A-1

About This Document

How To Use This Document

This document describes network specific features and procedures needed when operating the PROFIBUS Slave Interface for the Anybus X-Gateway. For general information and operating instructions for the Anybus X-Gateway, consult the Anybus-X Generic Gateway User Manual.

The reader of this document is expected to be familiar with PROFIBUS networking technology, and communication systems in general.

For further information, documentation etc., please visit the HMS website, 'www.anybus.com'.

Important User Information

The data and illustrations found in this document are not binding. We, HMS Industrial Networks AB, reserve the right to modify our products in line with our policy of continuous product development. The information in this document is subject to change without notice and should not be considered as a commitment by HMS Industrial Networks AB. HMS Industrial Networks AB assumes no responsibility for any errors that may appear in this document.

There are many applications of this product. Those responsible for the use of this device must ensure that all the necessary steps have been taken to verify that the application meets all performance and safety requirements including any applicable laws, regulations, codes, and standards.

Anybus® is a registered trademark of HMS Industrial Networks AB. All other trademarks are the property of their respective holders.

Warning:	This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
ESD Note:	This product contains ESD (Electrostatic Discharge) sensitive parts that may be damaged if ESD control procedures are not followed. Static control precautions are required when handling the product. Failure to observe this may cause damage to the product.

Related Documents

[illegible]

Document History

Summary of Recent Changes (v1.03... 1.04)

[illegible]

Revision List

[illegible]

Conventions & Terminology

The following conventions are used throughout this document:

- Numbered lists provide sequential steps
- Bulleted lists provide information, not procedural steps
- The term ‘X-Gateway’ refers to the Anybus X-Gateway
- The term ‘Slave interface’ refers to the PROFIBUS Slave interface for the Anybus X-Gateway.
- The term ‘user manual’ refers to the Anybus-X Generic Gateway User Manual.
- Hexadecimal values are written in the format NNNNh, where NNNN is the hexadecimal value.
- 16/32 bit values are generally stored in Motorola (big endian) format unless otherwise stated.

Sales and Support

Sales		Support	
HMS Sweden (Head Office)			
E-mail:	sales@hms-networks.com	E-mail:	support@hms-networks.com
Phone:	+46 (0) 35 - 17 29 56	Phone:	+46 (0) 35 - 17 29 20
Fax:	+46 (0) 35 - 17 29 09	Fax:	+46 (0) 35 - 17 29 09
Online:	www.anybus.com	Online:	www.anybus.com
HMS North America			
E-mail:	us-sales@hms-networks.com	E-mail:	us-support@hms-networks.com
Phone:	+1-312 - 829 - 0601	Phone:	+1-312-829-0601
Toll Free:	+1-888-8-Anybus	Toll Free:	+1-888-8-Anybus
Fax:	+1-312-629-2869	Fax:	+1-312-629-2869
Online:	www.anybus.com	Online:	www.anybus.com
HMS Germany			
E-mail:	ge-sales@hms-networks.com	E-mail:	ge-support@hms-networks.com
Phone:	+49 (0) 721-989777-000	Phone:	+49 (0) 721-989777-000
Fax:	+49 (0) 721-989777-010	Fax:	+49 (0) 721-989777-010
Online:	www.anybus.de	Online:	www.anybus.de
HMS Japan			
E-mail:	jp-sales@hms-networks.com	E-mail:	jp-support@hms-networks.com
Phone:	+81 (0) 45-478-5340	Phone:	+81 (0) 45-478-5340
Fax:	+81 (0) 45-476-0315	Fax:	+81 (0) 45-476-0315
Online:	www.anybus.jp	Online:	www.anybus.jp
HMS China			
E-mail:	cn-sales@hms-networks.com	E-mail:	cn-support@hms-networks.com
Phone:	+86 (0) 10-8532-3183	Phone:	+86 (0) 10-8532-3023
Fax:	+86 (0) 10-8532-3209	Fax:	+86 (0) 10-8532-3209
Online:	www.anybus.cn	Online:	www.anybus.cn
HMS Italy			
E-mail:	it-sales@hms-networks.com	E-mail:	it-support@hms-networks.com
Phone:	+39 039 59662 27	Phone:	+39 039 59662 27
Fax:	+39 039 59662 31	Fax:	+39 039 59662 31
Online:	www.anybus.it	Online:	www.anybus.it
HMS France			
E-mail:	fr-sales@hms-networks.com	E-mail:	fr-support@hms-networks.com
Phone:	+33 (0) 3 68 368 034	Phone:	+33 (0) 3 68 368 033
Fax:	+33 (0) 3 68 368 031	Fax:	+33 (0) 3 68 368 031
Online:	www.anybus.fr	Online:	www.anybus.fr
HMS UK & Eire			
E-mail:	uk-sales@hms-networks.com	E-mail:	support@hms-networks.com
Phone:	+44 (0) 1926 405599	Phone:	+46 (0) 35 - 17 29 20
Fax:	+44 (0) 1926 405522	Fax:	+46 (0) 35 - 17 29 09
Online:	www.anybus.co.uk	Online:	www.anybus.com
HMS Denmark			
E-mail:	dk-sales@hms-networks.com	E-mail:	support@hms-networks.com
Phone:	+45 (0) 35 38 29 00	Phone:	+46 (0) 35 - 17 29 20
Fax:	+46 (0) 35 17 29 09	Fax:	+46 (0) 35 - 17 29 09
Online:	www.anybus.com	Online:	www.anybus.com
HMS India			
E-mail:	in-sales@hms-networks.com	E-mail:	in-support@hms-networks.com
Phone:	+91 (0) 20 40111201	Phone:	+91 (0) 20 40111201
Fax:	+91 (0) 20 40111105	Fax:	+91 (0) 20 40111105
Online:	www.anybus.com	Online:	www.anybus.com

About the PROFIBUS Slave Interface

General Description

The PROFIBUS Slave Interface for the Anybus X-Gateway offers complete slave functionality according to extensions of EN 50170 (DPV1), supporting the standard DP functionality as well as acyclic Class 1 and Class 2 services.


Like all X-Gateway interfaces, the PROFIBUS Slave interface exchanges data via two buffers as follows:

- **Input Buffer**

This buffer holds data forwarded *from* the other network, i.e. data which is read by the PROFIBUS master.

- **Output Buffer**

This buffer is forwarded *to* the other network, i.e. data which is written by the PROFIBUS master.

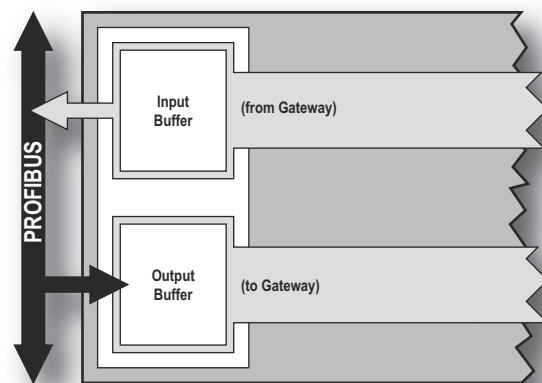


Features

- Galvanically isolated PROFIBUS interface
- Complete DP-V1 Slave functionality according to extensions of EN 50170 (DP-V1)
- Automatic baudrate detection (9600 bit/s - 12 Mbit/s)
- Supports PA baud rate 45.45 kbit/s
- Address range: 1-99 using onboard switches
- Up to 244 bytes of cyclic I/O in each direction, 328 bytes in total
- Supports acyclic Class 1 & Class 2 services

External View


Interface Status LEDs

LED	Colour	Indication
Acyclic	Off	No acyclic traffic
	Green	Processing acyclic request
Online	Green	Online
	Green, flashing	Clear mode
	Red	Major internal fault
	Off	Not online
Offline	Red	Offline
	Off	Not offline
Diagnostics	Red, 1Hz	Error in Configuration Data
	Red, 2Hz	Error in User Parameter Data
	Red, 4Hz	Internal error
	Off	No diagnostics present
Gateway Status	(Consult the Anybus X-gateway user manual for further details)	

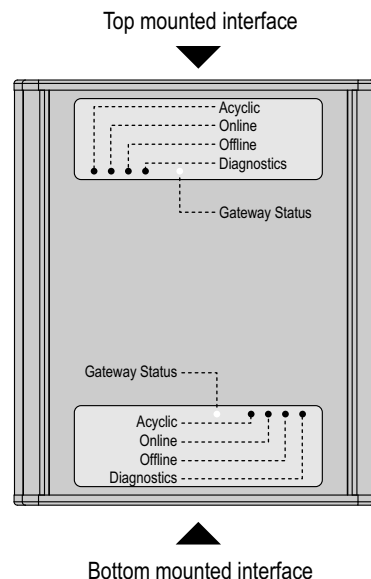

Connectors and Switches

#	Description
1	PROFIBUS connector (See A-1 "PROFIBUS Connector Pinout")
2	PROFIBUS node address switches (See 3-1 "Node Address")
3	Gateway power connector (Consult the Anybus X-gateway user manual for further details)
4	Gateway Config connector (Consult the Anybus X-gateway user manual for further details)

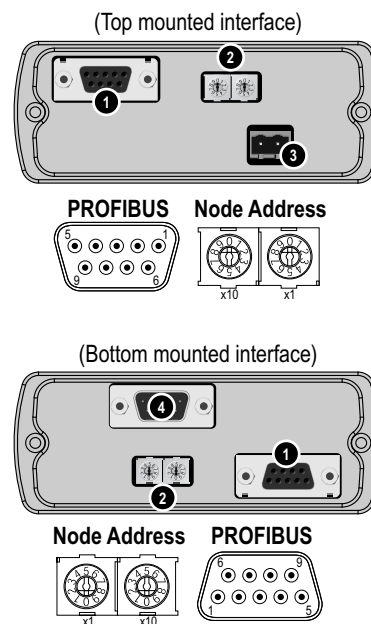


Data Exchange

On PROFIBUS, data from the gateway is represented as cyclical I/O data (DP) and Acyclical I/O data (DP-V1).


The amount of data that is represented as Cyclical I/O data vs. the amount that is represented as Acyclical I/O data can be configured via the Gateway Config interface.¹

The Slave interface can handle up to 244 bytes of I/O data in each direction. However, the total data size (input + output) cannot exceed 328 bytes.

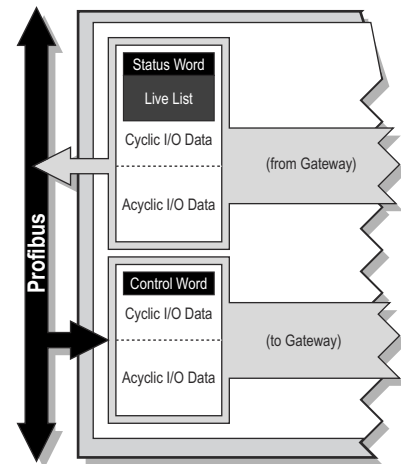


Input Data (Gateway to PROFIBUS)

Depending on the type of gateway and how it has been configured, up to 10 bytes of the data produced by the gateway may be occupied with status information.

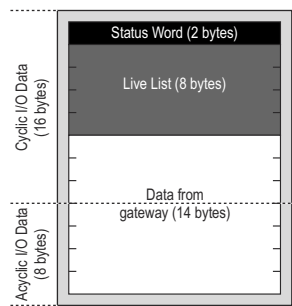

Example A:

Cyclic I/O Data Size = 16
Acyclic I/O Data Size = 8
Live List = Enabled
Control & Status Word = Enabled

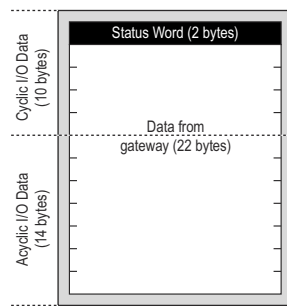

Example B:


Cyclic I/O Data Size = 10
Acyclic I/O Data Size = 14
Live List = Disabled
Control & Status Word = Enabled

Note: The Live List is only available on master-slave gateway versions.

1. Please consult the Anybus X-gateway user manual for more information about and how to use the Gateway Config interface.


Output Data (PROFIBUS to Gateway)

Depending on how the gateway is configured, the first two bytes consumed by the gateway may be interpreted as control information.

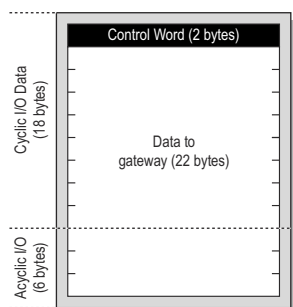

Example A:

Cyclic I/O Data Size = 18
Acyclic I/O Data Size = 6
Control Word = Enabled

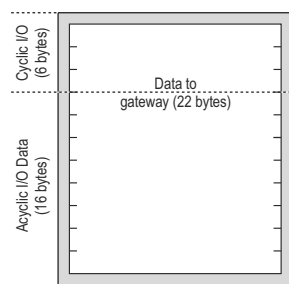

Example B:

Cyclic I/O Data Size = 6
Acyclic I/O Data Size = 16
Control Word = Disabled

Note: The Live List is only available on master-slave gateway versions.


Installation and Configuration

Node Address

On a PROFIBUS network, each node must be assigned its own unique node address. The Slave interface features on board switches for node address configuration, providing an address range of 1 - 99.

Example:

In this example, the profibus node address will be 42 (4×10) + (2×1).

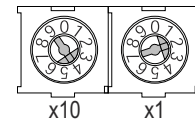

Note: Depending on if the Slave interface is top or bottom mounted, the orientation of the switches are different.

Network Configuration (Anybus NetTool for PROFIBUS)

General Information

The following example describes how to include the Slave interface in a PROFIBUS network using Anybus NetTool for PROFIBUS. (The procedure used for other network configuration tools is similar, although individual steps may be slightly different.)

Step 1: Install the .GSD-file

Each device in a PROFIBUS network is associated with an .GSD-file¹. This file contains information about the device and is used by the network configuration tool, in this case Anybus NetTool for PROFIBUS.

1. Start Anybus NetTool for PROFIBUS.
2. To add the .GDS-file for the Slave interface, select 'Install new GS*-file' from the 'Tools' menu.
3. Select the .GSD file using the file selector, and click 'Open'.

The .GSD-file is now included in the configuration tool (Anybus NetTool for PROFIBUS).

Step 2: Create a New Configuration

(If the Slave interface should be included in an existing configuration, the steps in this section can be skipped)

1. The latest version of the .GSD-file for this product can be obtained either by downloading it from the HMS website (www.hms-networks.com) or received by contacting HMS.

The following steps describes how to create a simple configuration with a PROFIBUS master and a slave (in this case the PROFIBUS Slave interface for the X-Gateway). Note that this requires that a master has previously been installed in the configuration tool.

1. Select 'New' from the 'Project' menu.
2. Drag the desired PROFIBUS master from the tree structure on the left of the screen to the network window on the right.
3. Drag the 'Anybus-S DPV' (Which is the same as the PROFIBUS Slave interface for the X-Gateway) slave from the tree structure on the left of the screen to the network window on the right.
4. Double click on the Slave interface in the network window.
5. Make sure the value under 'PROFIBUS Address' matches the node address switches on the module.
6. Click 'OK'

The Slave interface is now included in the PROFIBUS configuration tool (Anybus NetTool for PROFIBUS).

Step 3: Configure the I/O block layout of the Slave Interface

To be able to exchange data, the master will need to know the I/O configuration of the Slave interface.

1. Expand the I/O settings for the 'Anybus-S DPV'. This will reveal I/O blocks that are used to compose the I/O data configuration of the Slave interface.
2. Drag I/O blocks to the Slave interface window, until the total size of the I/O modules matches the I/O configured in the Slave interface.

Step 4: Download Configuration the Configuration into the Master

To be able to download the configuration, it must first be saved to disk.

1. Select 'Download Configuration' from the 'Online' menu
You program will now ask if the current configuration should be saved.
2. Click 'Yes'.
In the file selector, type a filename for the configuration.
3. Click 'Save'. The file will now be saved.
4. A dialog will appear, prompting for the transport path (PCI, serial etc.) to use for the master.
5. Select the transport path to use, and click 'OK'.

The configuration will now be downloaded into the master

Step 4: Go Online

To be able to exchange data, the configuration must be downloaded into the master.

1. Select 'Download Configuration' from the 'Online' menu
2. The Slave interface should now exchange data on the PROFIBUS network.

Note: If problems exist, verify that the I/O block configuration for the Slave Interface ('Anybus-S DPV') in Anybus NetTool for PROFIBUS matches the configuration of the gateway (See chapter 'Gateway Config Interface' in the user manual). Also make sure that the node address specified for the Slave interface ('Anybus-S DPV') matches the settings of the on board switches, and that the node address does not conflict with another device on the PROFIBUS network. Furthermore, verify that the settings for the transport provider matches the interface and PROFIBUS master.

Technical Specification


Network Interface Details

- Complete PROFIBUS-DPV1 Slave functionality according to extensions of EN 50170 (DPV1)
- Supports Class 1 & Class 2 services
- Automatic baudrate detection (9600 bit/s - 12 Mbit/s)
- Supports PA baud rate 45.45 kbit/s
- Optically isolated PROFIBUS interface with on-board DC/DC converter.
- Address range: 1-99 using onboard switches
- Cyclic I/O data size up to 244 bytes in/244 bytes out, max 328 bytes total (in+out)
- User Parameter data/Diagnostics length - up to 237 bytes.
- LED-indications: ON-line, OFF-line, Fieldbus related diagnostics

PROFIBUS Connector Pinout

PROFIBUS connectivity is provided via a 9 pin female D-sub connector.

#	Signal	Description
housing	Shield	Connected to PE
1	-	(not connected)
2	-	(not connected)
3	B-Line	Positive RS485 RxD/TxD
4	RTS	Request to send
5	GND BUS	Isolated GND from RS485 side
6	+5V BUS	Isolated GND from RS485 side
7	-	(not connected)
8	A-Line	Negative RS485 RxD/TxD
9	-	(not connected)

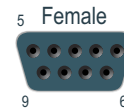

Recommended Profibus Connectors

- **Profibus Max standard**
Part no. 134928 and PROFIBUS reversed, part no. 104577
web: www.erni.com
- **Fast connect Bus connector**
Part no. 6GK1500-0FC00 or 6ES7 972-0BA50-0XA0
web: www.siemens.com

